


532-661 Portable Basketball Backstop Aluminum Fan Backboard

Page 1
Rev. 10/05/2004

IMPORTANT

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING ASSEMBLY. All equipment must be installed in accordance with these instructions. Check your shipment against Bill of Lading and Parts list. Any missing or broken parts must be reported to your distributor within 10 days of receipt of your order. When properly installed and maintained, equipment will give many years of Safe, Trouble-Free use. Periodically check for loose or broken parts. Loose bolts must be tightened and broken parts must be replaced as they can possibly create dangerous situations leading to unnecessary accidents.

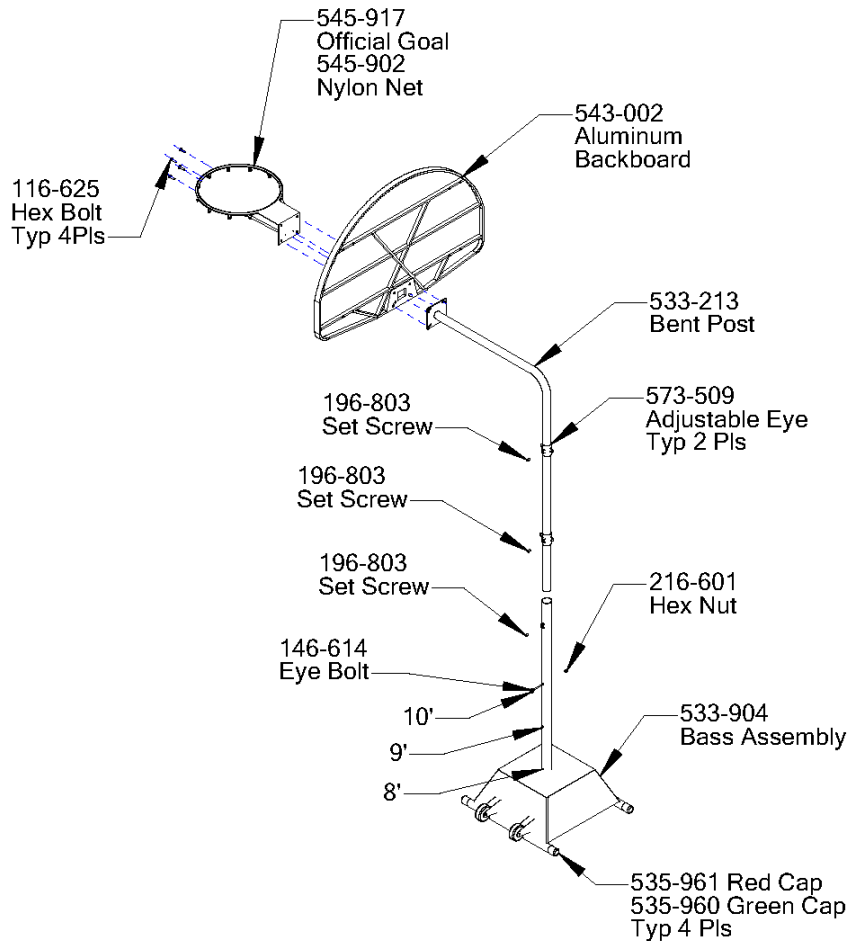

PACKING LIST

1	CTN	1	Hardware Bag
		2	573-509 Adjustable Eye
1	CTN	1	545-917 Official Goal
		1	545-902 Nylon Net
1	CTN	1	543-002 Aluminum Backboard
1	PIPE	1	533-213 Post
1	BASE	1	533-904 Base Assembly

HARDWARE BAG

3	196-803	½" x ¾" Socket Set Screw
1	146-614	3/8" x 5" Eye Bolt
4	116-625	3/8" x 1 ½" Hex Head Bolt
4	316-601	3/8" Flat Washer
5	216-601	3/8" Hex Nuts
1	416-400	¼" Socket Key
4	535-960	Green Plastic Caps
4	535-961	Red Plastic Caps
4	236-604	3/8" Round "T" Nut

3 CTN 1 PIPE 1 BASE 5 TOTAL PCS 359# Weight Class 70

SportsPlay Equipment, Inc., 5642 Natural Bridge, St. Louis, MO 63120 (314) 389-4140
www.sportsplayinc.com

532-661 Portable Basketball Backstop
Aluminum Fan Backboard

Page 2
Rev. 10/05/2004

ASSEMBLY AND INSTALLATION:

NOTE: All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers, "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points. DO NOT tighten nuts more than hand-tight until entire assembly is completed.

STEP #1: Secure nylon net to goal.

STEP #2: Attach 543-002 backboard to 533-213 Bent Post using:

4 - 3/8" x 1 1/2" Hex Head tap bolt 4 - 3/8" Flat Washer
4 - 3/8" Round "T" nut

NOTE: Insert bolts with washer attached from bent post side into T nut with threaded end inserted into backboard openings so that bolt ends extend beyond backboard. Level backboard on bent post.

STEP #3: Attach Goal to Backboard using:

4 - 3/8" Hex Nuts 4 - 3/8" Flat Washers

NOTE: Tighten goal to backboard to post by holding front hex nut and tightening on bolt end. This pulls the threaded round "T" nut tight to backboard.

STEP #4: Slide adjustable eyes on support post and secure.

STEP #5: Insert height adjustment bolt in hole desired for 8, 9 or 10' goal height.

STEP #6: Tilt base so post is approximately horizontal and insert support post so backboard and goal are over wheels on base towards the ground. Tighten setscrew, securing post to base.

STEP #7: When in use post should be installed so backboard is at 90-degree angle to wheels. Loosen setscrew, rotate post, and retighten setscrew.

STEP #8: To move unit, rotate post so backboard is over wheels. Always retighten setscrew then tilt down and move.

STEP #9: To raise or lower backboard, tilt to horizontal position and then adjust to correct height.

STEP #10: Assemble red cap first, then slip green cap over red on base pipes.

MAINTENANCE INSTRUCTIONS:

Check periodically for loose bolts, broken parts and replace immediately.

THE USE OF A FLOOR PLATE ADAPTER TO ANCHOR THE UNIT TO A FLOOR PLATE IS STRONGLY RECOMMENDED TO INCREASE STABILITY AND PREVENT TIPPING.

SportsPlay Equipment, Inc., 5642 Natural Bridge, St. Louis, MO 63120 (314) 389-4140
www.sportsplayinc.com