


541-624 Reinforced Bentpost Aluminum Fan Backboard

Page 1 of 1
Rev. 04/11/03

IMPORTANT

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING ASSEMBLY. All equipment must be installed in accordance with these instructions. Check your shipment against Bill of Lading and Parts list. Any missing or broken parts must be reported to your distributor within 10 days of receipt of your order. When properly installed and maintained, equipment will give many years of Safe, Trouble-Free use. Periodically check for loose or broken parts. Loose bolts must be tightened and broken parts must be replaced as they can possibly create dangerous situations leading to unnecessary accidents.

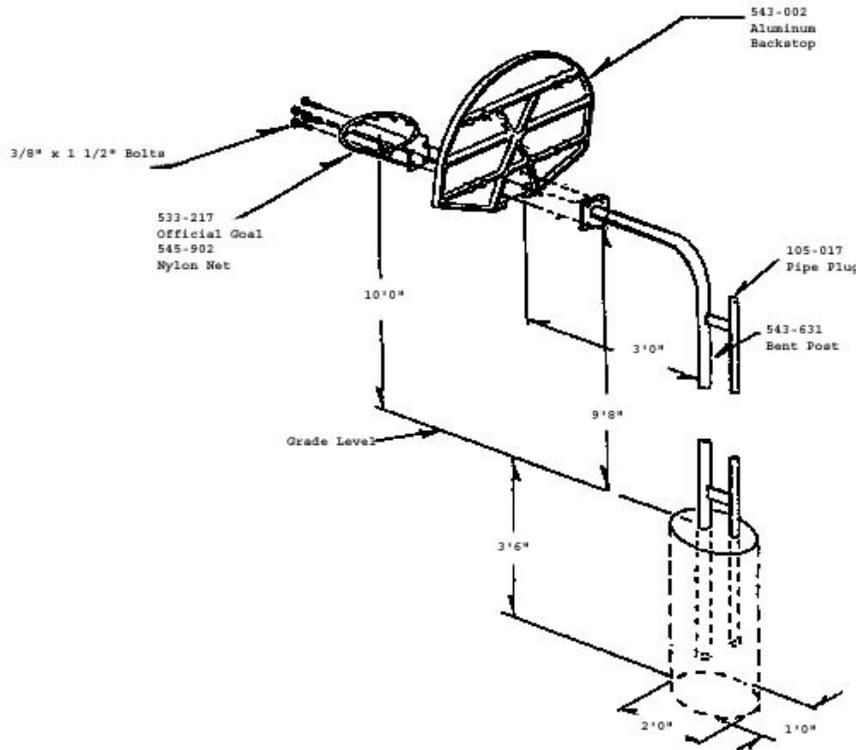

PACKING LIST

1	CTN	1	Hardware Bag
		1	533-217 Official Goal
		1	545-902 Nylon Net
1	CTN	1	543-002 Aluminum Fan Backboard
1	PIPE	1	543-631 Bent Post

HARDWARE BAG

4	116-606	3/8" x 1 1/2" Hex Bolts
8	316-601	3/8" Flat Washers
4	216-601	3/8" Hex Nut
1	105-017	2 3/8" Pipe Plug

2 CTN	1 PIPE	3 TOTAL PCS	160# Weight	Class 70
-------	--------	-------------	-------------	----------

541-624 Reinforced Bentpost
Aluminum Fan Backboard

Page 2 of 2
Rev. 04/11/03

ASSEMBLY AND INSTALLATION:

NOTE: All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers, "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points.

DO NOT tighten nuts more than hand-tight until entire assembly is completed.

STEP #1: Locate and dig footing holes for 543-631 Post

STEP #2: Place Post into footing hole. Brace post so that distance from underside of extension to top of playing surface is 9'8".

STEP #3: Mix and pour Concrete into footing holes using:

7 - 80 lb. Bags Pre Mix Cement

STEP #4: Attach Goal and Net to Aluminum fan backboard and 543-631 Post using:

4 - 3/8" x 1 1/2" Hex Bolts

8 - 3/8" Flat Washers

4 - 3/8" Hex Nuts

NOTES: Wait 48 hours for concrete to harden before using unit.

DO NOT install where overhead electrical wires are present.

Be sure the distance between the top of the rim and the playing surface is 10' 0".

MAINTENANCE INSTRUCTIONS:

Check periodically for loose bolts, broken parts and replace immediately.