


801-178 20' SINGLE ENTRY BIKE RACK (Perm)

IMPORTANT

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING ASSEMBLY. All equipment must be installed in accordance with these instructions. Check your shipment against Bill of Lading and Parts list. Any missing or broken parts must be reported to your distributor within 10 days of receipt of your order. When properly installed and maintained, equipment will give many years of Safe, Trouble-Free use. Periodically check for loose or broken parts. Loose bolts must be tightened and broken parts must be replaced as they can possibly create dangerous situations leading to unnecessary accidents. Resilient Surfacing should be used under all playground equipment. Appropriate publications, available at no charge, from the Consumer Product Safety Commission, include "A Handbook for Public Playground Safety". You can receive your free copy by calling 1-301-504-7908.

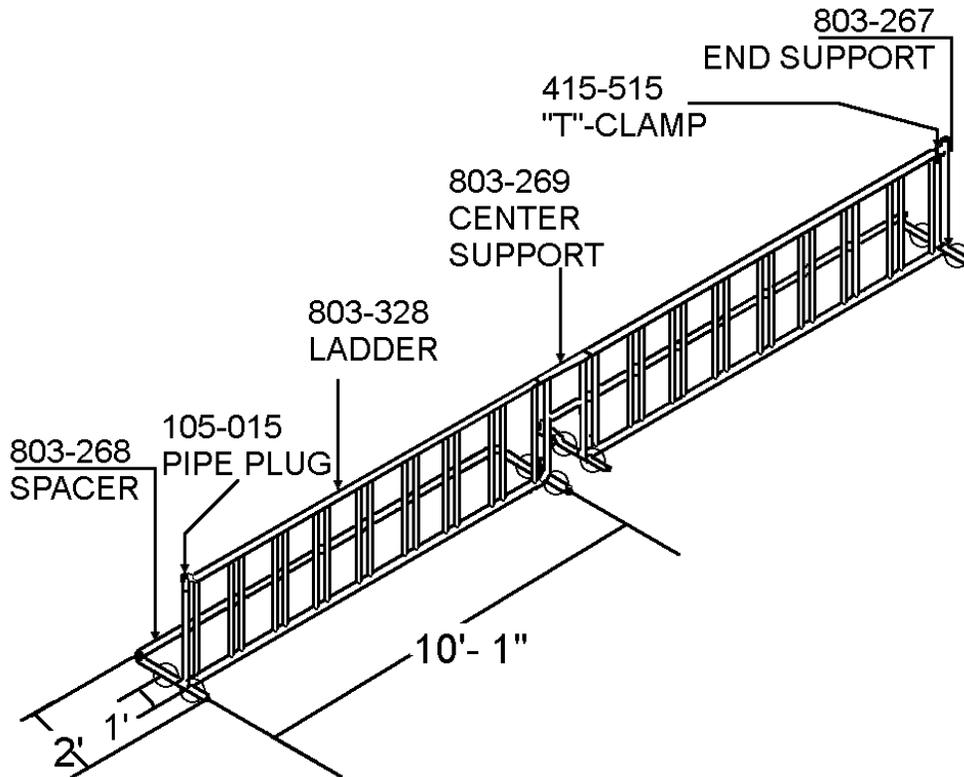

PACKING LIST

1	CTN		Hardware Bag
1	BDL	2	803-268 Spacer Bar
1	BDL	2	803-267 End Support
1	WF	1	803-269 Center Support
2	WF	2	803-328 Ladder

HARDWARE BAG

8	196-644	3/8" x 8" Anchor Bolt
4	116-514	5/16" x 3 1/2" Hex Bolt
12	116-510	5/16" x 2 1/2" Hex Bolt
16	326-501	5/16" Lock Washer
8	216-601	3/8" Hex Nut
8	226-601	3/8" Lock Nut
16	226-501	5/16" Lock Nut
6 pr	415-515	1 5/8" T-Clamp
14	105-015	1 5/8" Pipe Plug

1 CTN	2 BDL	3 WF	6 TOTAL PCS	WT 150#	CLASS 70
-------	-------	------	-------------	---------	----------

801-178 20' SINGLE ENTRY BIKE RACK (Perm)


GENERAL ASSEMBLY INSTRUCTIONS:

Check all the parts and hardware with the packing list too be sure you have received everything needed to assemble this product. CONTACT YOUR LOCAL DISTRIBUTOR OR SPORTSPRAY EQUIPMENT WITH NOTIFICATION OF ANY MISSING OR DAMAGED PARTS. Contact must be made within ten days of receipt of your order.

Only hand tighten nuts & bolts on initial assembly. Final tightening should be done **EVENLY** after final assembly when unit has been plumbed & leveled.

After assembly is complete, ANY ENDS OF BOLTS PROTRUDING BEYOND NUTS SHOULD BE CUT OFF AND/OR PEENED OVER TO REMOVED ANY SHARP PROJECTIONS. Go over entire unit to file smooth any sharp edges or projections that may have been caused by rough handling in shipping or installation.

USE AREA AND FOOTING DIAGRAM:

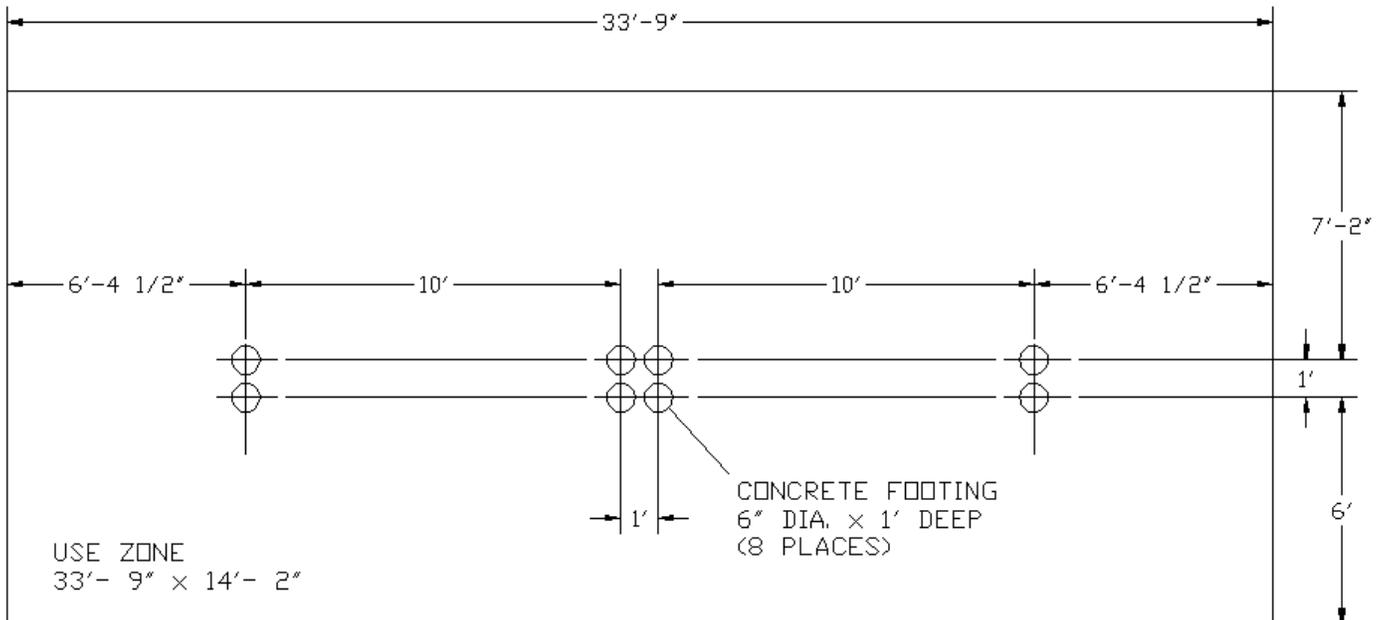

801-178 20' SINGLE ENTRY BIKE RACK (Perm)

Page 3
Rev 06/12/08

GENERAL MAINTENANCE INSTRUCTIONS:


Check MONTHLY for loose bolts, damaged or broken parts. Tighten and/or replace immediately.

SPECIFIC ASSEMBLY INSTRUCTIONS:


- Step #1 Assemble bike rack as per drawing on page 1. Start by attaching #803-268 Spacer Bar to one end support and the center support.
- Step #2 Attach ladder to end supports using T-Clamps. The top of the center support slides over the top rail of the ladder. The bottom of the center support is attached with a T-clamp.
- Step #3 Attach other end of bike rack following same procedure.
- Step #4 Drive in pipe plugs on all open pipe ends.
- Step #5 Attach Anchor Bolts to end supports and place Bike Rack in position over footing holes.
- Step #6 Pour concrete. Wait 48 hours before using equipment.

801-178 20' SINGLE ENTRY BIKE RACK (Perm)

T-Clamp Detail:

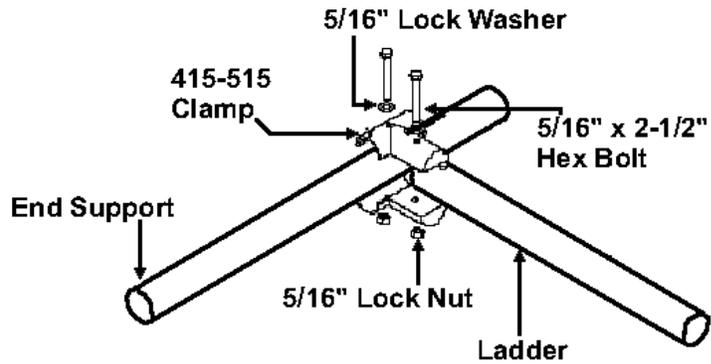

**End Support and
Spacer Detail:**

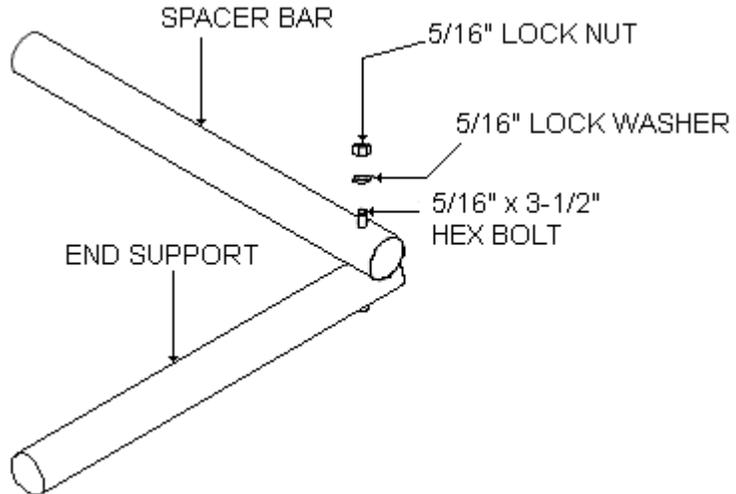

**Anchor Bolt
Detail:**

